

VAL 200: Selection and Use of Biological Indicators during Validation Studies

Figure 1: Typical *Geobacillus Stearotherophilus* spore strip



Figure 2: typical *Geobacillus Stearotherophilus* EZ-test ampoules



Figure 3: typical *Geobacillus Stearotherophilus* Glass ampoules (liquids)



VAL 200: Selection and Use of Biological Indicators during Validation Studies

Figure 4: standard BI wrapping method used during validation studies.

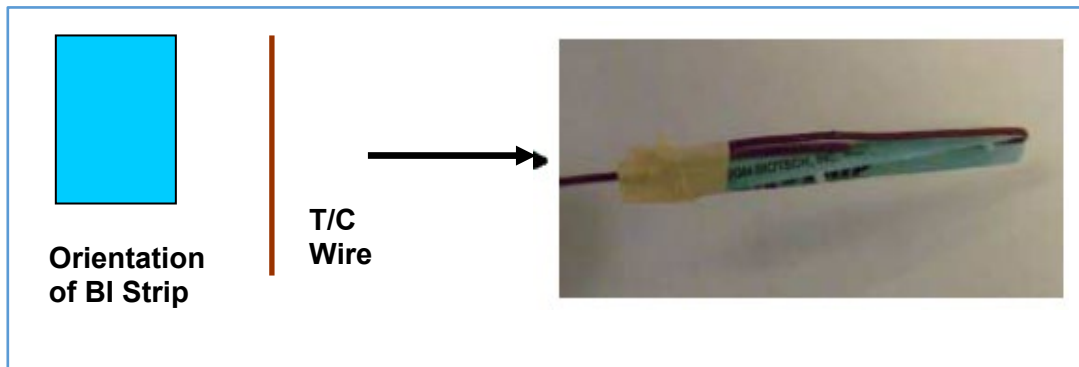


Figure 5: reduced space wrapping method used during validation studies.

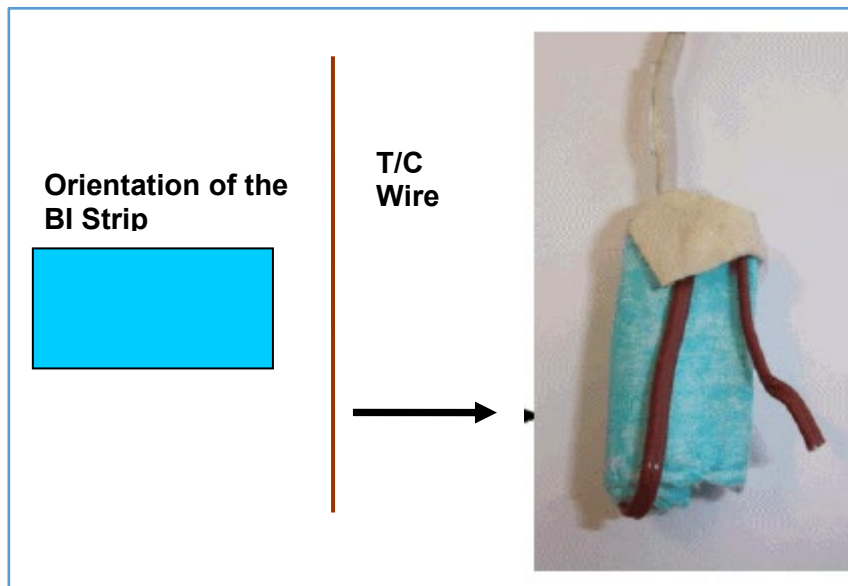


Figure 6: Protected wrapping method used during validation studies.

